# **MAO Series**

125/250 Flow Meter

### **Key Features**

All Teflon® wetted parts model available. No seals. Undamaged by over ranging.

#### **Features**

- No Bearings
- Single Moving Part
- In Line Metering
- No Rotating internals
- Materials:316SS, Brass or Teflon®
- Output: Analog, Digital and Current loop
- Measures Low Flows

### **Applications**

- Wet Benches
- Cooling Systems
- Corrosive Chemical Dispensing
- Materials Consumption Measurement
- Process Controls
  Patent No's
  4,858,647
  4,905,844
  5,033,311
  Others may apply.



### **Operation**

When fluid flows through the unit it displaces the Teflon encapsulated magnetic piston. This displacement is proportional to the volumetric flow through the unit. A transducer, encapsulated in the body outside the fluid path, senses the displacement of the piston. The transducer's signal is converted by a microprocessor-based conditioning circuit then sends the signal to three types of outputs: voltage, pulse and current loop.

- Total accuracy: ±5%
- Repeatability: ±2% full scale
- Linearity: ±2% full scale

### **Temperature Operating Range**

- Ambient: 0° to 125°F (-18° to 52°C)
- Media: 0° to 180°F (-18° to 82°C)

Specificatio	Specifications						
Model	Weight Lbs. (Kg.)	Max Working Pressure PSIG (barg)	Wetted Parts				
MAO-125/250-T	0.63 (0.29)	80 (5.51)	Teflon®				
MAO-125/250-B	1.30 (0.59)	1500 (103.42)	Brass, Teflon®				
MAO-125/250-S	1.30 (0.59)	3000 (206.84)	316SS, Teflon®				

Pressure Loss						
Model	Min/Max	Linear Range ML/M (GPH)	ΔP MBARS (PSID)			
MAO-125-AA	Minimum	20 (0.32)	24.82 (0.36)			
IVIAU-125-AA	Maximum	70 (1.11)	42.06 (0.61)			
MAO-125-BB	Minimum	50 (0.79)	8.27 (0.12)			
IVIAU-125-BB	Maximum	150 (0.79)	10.34 (0.15)			
MAO-250-AA	Minimum	100 (1.59)	8.27 (0.12)			
WAO-250-AA	Maximum	500 (7.93)	9.65 (0.14)			
MAO-250-BB	Minimum	260 (4.12)	10.34 (0.15)			
IVIAU-250-BB	Maximum	1800 (28.54)	20 (0.29)			

					Б.	
Model	ML/MIN (GPH)	VDC	Hz	mA	Ports FNP	
	0	0	0	0	1/8"	
MAO- 125XAA	20 (0.317)	1	40	4		
	32.5 (0.5151)	2	80	8		
	45 (0.7133)	3	120	12		
	57.5 (0.9114)	4	160	16		
	70 (1.1095)	5	200	20		
	0	0	0	0	1/8"	
	50 (0.7925)	1	40	4		
MAO-	75 (1.1888)	2	80	8		
125XBB	100 (1.585)	3	120	12		
	125 (1.9813)	4	160	16		
	150 (2.3775)	5	200	20		
	0	0	0	0	1/4"	
	100 (1.585)	1	40	4		
MAO-	200 (3.1701)	2	80	8		
250XAA	300 (4.7551)	3	120	12		
	400 (6.3401)	4	160	16		
	500 (7.9252)	5	200	20		
	0	0	0	0	1/4"	
	250 (3.9626)	1	40	4		
MAO-	638 (10.1125)	2	80	8		
250XBB	1025 (16.2466)	3	120	12		
	1413 (22.3965)	4	160	16		
	1800 (28.5306)	5	200	20		

# **MAO Series**

125/250 Flow Meter

### **Electrical Specifications**

POWER REQUIREMENTS: Voltage: Regulated 15 – 30 VDC

Current: 250 mA

**OUTPUTS:** 

ANALOG: 0 - 5 VDC

Minimum Load Impedance: 5k ohm in parallel

with 250pf

DIGITAL:

200 Hz, Square wave 50% duty cycle TTL

compatible output.


CURRENT LOOP: Current Loop: 4 - 20 mA


Loop Load :  $100\Omega \pm 1\% 1/4$  watt

WIRE CONNECTION:

Red - (+)

Black – (Common) White – (Frequency) Green – (Voltage) Brown – (Current)

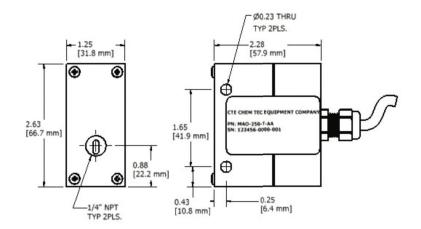



## **How to Order**

Sales@ChemTec.com | 800.222.2177

Model	Size	Switch		Options	
MAO	125 250	ВЕ	Teflon® Brass Stainless Steel	(See Chart) AA BB	

\*Consult Factory \*\*Standard with Teflon unit | Viton® - E.I. Dupont & Co | Teflon® - E.I. Dupont & Co | Kalrez® - E.I. Dupont & Co All dimensions are subject to change for quality improvement. Not responsible for printing errors.

#### Installation

Control valves should be placed downstream of the MAO flow meter. The flow meter should never be installed so that it drains completely when flow ceases. When particles may be present in the media, a filter should be installed ahead of the flow meter. It is advisable to filter to 10 microns. The MAO flow meter should not be located near ferrous material or near strong electromagnetic fields.

The MAO flow meter is sensitive to velocity prole disturbances in the flow stream. It is advisable that straight lengths of 10 inside diameters upstream and 5 inside diameters downstream be used. All lines should be completely purged of air before use. The use of pipe paste is not recommended. Use care when using Teflon tape to avoid shreds from entering the MAO flow meter.

### **Mounting**

MAO-125-X-AA; Mount with INLET vertical, INLET port up, OUTLET port horizontal. All other models mount with INLET port vertical, INLET port down, OUTLET port horizontal.